

APPLICATIONS
DODGE Sprinter 2007-2008

CT23MB10


KIT FEATURES

- DIN Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Double DIN Radio Provision
- Stacked ISO Mount Units Provision



KIT COMPONENTS

- A) Radio Housing • B) ISO Brackets • C) Trim Plate • D) Double DIN Brackets
- E) Double DIN Trim Plate • F) Snap in Pocket

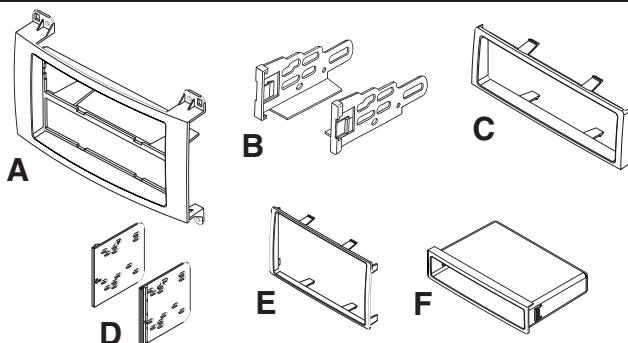

TOOLS REQUIRED:

- Small Flat Blade Screwdriver/ Panel Removal Tool
- Torx Screwdriver



TABLE OF CONTENTS

Dash Disassembly

- Dodge Sprinter 2007-2008	1
---	----------

Kit Assembly

- DIN Radio Provision with Pocket	2
- ISO Mount Radio Provision with Pocket.....	3
- Double DIN Radio Provision/Stacked ISO Mount Units Provision.....	4

<u>Final Assembly</u>	5
------------------------------------	----------




Note:

Refer also to the instructions included with the aftermarket radio.

DODGE SPRINTER 2007- 2008

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip the trim panel surrounding the climate controls and radio including the hazard switch panel. Unplug and remove the panel. (Figure A)
- 3** Unclip and remove pocket if so equipped. (Figure B)
- 4** Remove (4) T-20 Torx screws securing the radio. Unplug and remove radio. (Figure C)

Continue to kit assembly

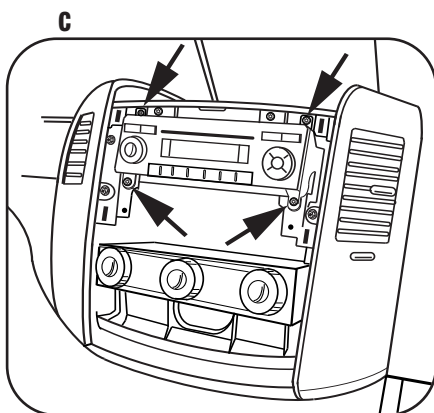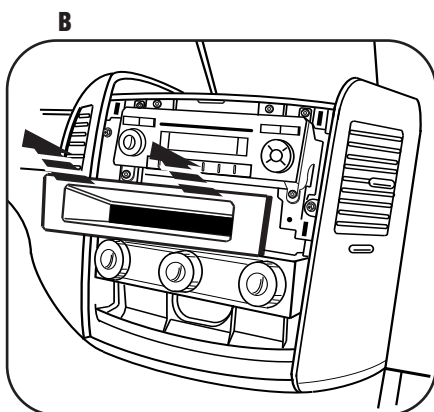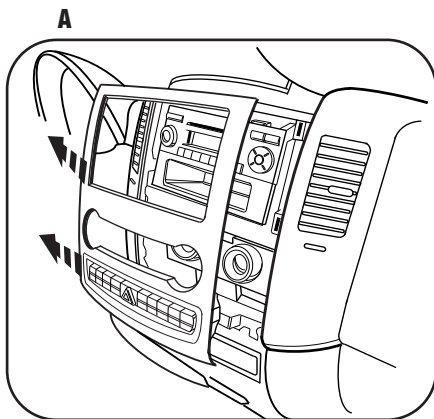


DIN RADIO PROVISION WITH POCKET

**Note: Refer also to the instructions included with the aftermarket radio.*


- 1 Slide the DIN cage into the radio housing and secure by bending the metal locking outward. (Figure A)
- 2 Slide the aftermarket radio into the cage until it snaps into place. (Figure B)
- 3 Snap the pocket into the radio housing. (Figure C)

Continue to final assembly.


A

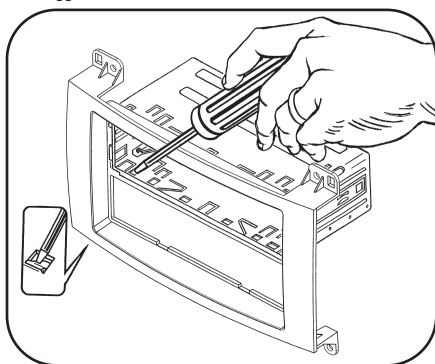

B

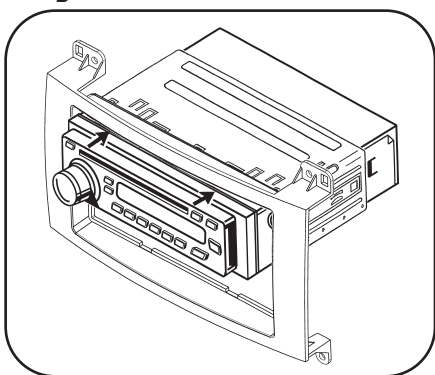

C

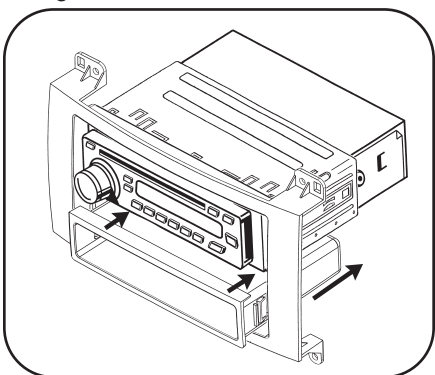


ISO MOUNT RADIO PROVISION WITH POCKET

**Note: Refer also to the instructions included with the aftermarket radio.*


- 1 Mount the ISO Brackets to the radio using the screws supplied with the radio. (Figure A)
- 2 Slide the radio/bracket assembly into the radio housing until it snaps into place. (Figure B)
- 3 Snap the ISO trim plate onto the front of the radio housing. (Figure B)
- 4 Snap the Pocket into the radio housing. (Figure C)

Continue to final assembly.


A

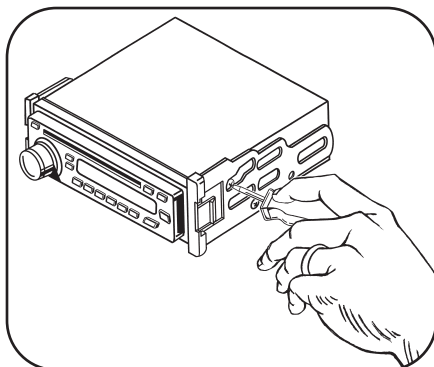

B

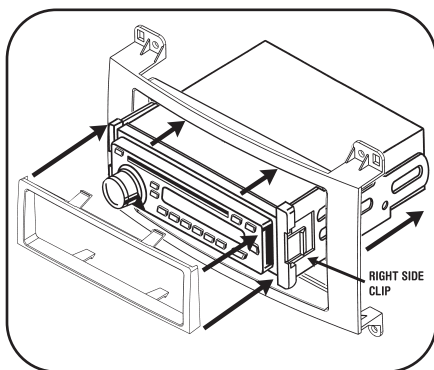

C

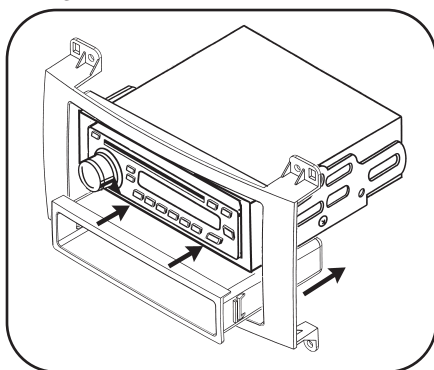


DOUBLE DIN RADIO PROVISION STACKED ISO MOUNT UNITS PROVISION

****Note: Refer also to the instructions included with the aftermarket radio.***


- 1 Cut and remove the center bar from the radio housing. (Figure A)
- 2 Snap the Double DIN brackets to the inside edge of the radio housing. (Figure B)
- 3 Slide the Double DIN radio or stacked ISO mount units into the bracket/radio housing assembly and secure the radio or stacked ISO mount units to the assembly using the screws supplied with the radio or the ISO mount units. (Figure C)
- 4 Snap the Double DIN trim plate onto the front of the radio/housing assembly. (Figure C)

Continue to final assembly.

A

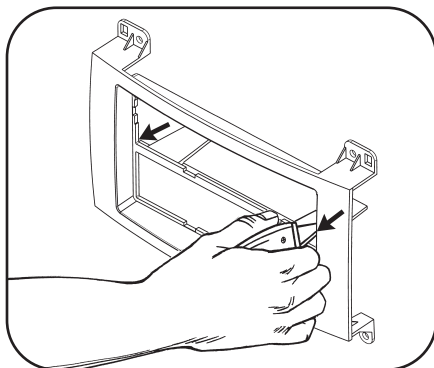

B

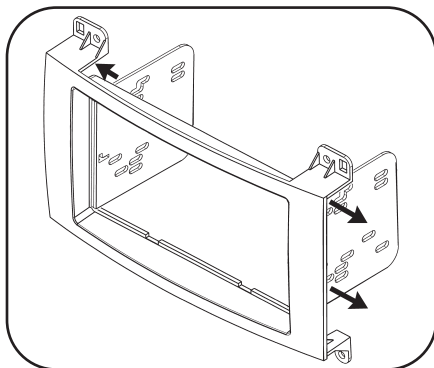

C

